

Aberthin Village Hall – Projector and Sound Instructions

Switching On

Screen

- To open (lower) the screen: **press the DOWN arrow**
The screen will fully extend.
- To close (raise) the screen: **press the UP arrow once**



Projector


- Using the **white projector remote**, press the **Power** button
- There is a short delay while the projector starts
- After a few moments, you will see the projector start-up image on the screen



Amplifier (Denon)

- Switch on power to the **equipment rack** (if not already on)
- Using the **Denon remote**, press **Power**
- When the Denon switches on, you will see the **Denon display activate on the projector screen**

At this point, the system is ready to use.

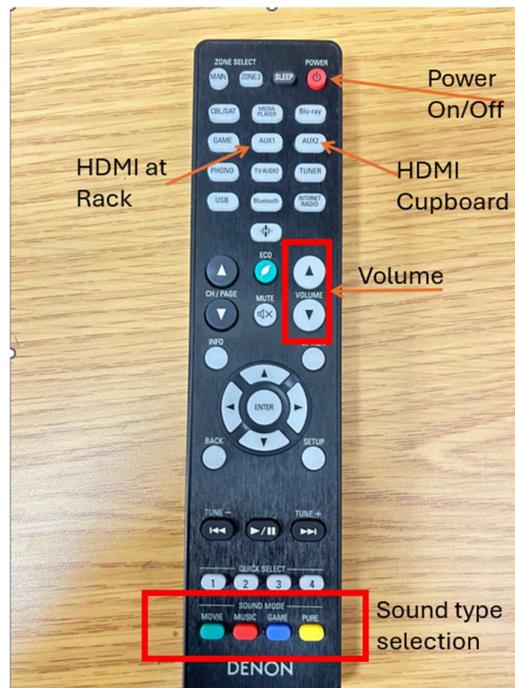

Connecting a Laptop (Slides, Films, Presentations)

You can connect a laptop using a **standard HDMI cable** at **either** location:

- At the **equipment rack** (Denon input: **AUX 1**)
- In the **rear cupboard** next to the projector (Denon input: **AUX 2**)

Check your laptop

- Ensure your laptop has an **HDMI socket**
 - Some laptops (Apple, HP, etc.) may require an **HDMI adaptor**
-

Select the correct input

Using the **Denon remote**:

- **AUX 1** Equipment rack HDMI
- **AUX 2** Rear cupboard HDMI

See photo of Denon remote

Most laptops will automatically display on the projector.

You should now see the laptop image on the screen and hear sound through the hall speakers.

Playing Music from a Phone (Wi-Fi – Recommended)

This is the **simplest and best-quality** way to play music without a laptop and not using the projector (sound only)

What you need

- Denon amplifier switched **ON**
- Your phone connected to the **Village Hall Wi-Fi**
- **Spotify app** installed

Steps

1. Switch on the **Denon amplifier**
2. Connect your phone to the **Village Hall Wi-Fi**
3. Open **Spotify**
4. Start playing a song
5. Tap the **speaker icon** (Devices)
6. Select “**Denon AVR-S760H**”

 Music will now play through the hall speakers



Volume

- Use the **Denon remote** to control volume
- Keep phone volume at a normal level

If you cannot see the Denon

- Check Wi-Fi is connected
- Make sure the Denon is switched on
- Wait 10–20 seconds and reopen Spotify

Bluetooth Music (No Wi-Fi)

If Wi-Fi is unavailable:

1. Press **Bluetooth** on the Denon remote
2. Pair your phone with **Denon AVR-S760H**

TROUBLESHOOTING

No picture on the screen

- Check the projector is switched on (you should hear the fan and see a light)

- Check the Denon amplifier is on – when it switches on, the front display will light up
 - Make sure the correct input is selected on the Denon remote:
 - Input Aux 1 = Laptop at equipment rack
 - Input Aux 2 = Laptop in rear cupboard
 - If there is still no image:
 - On the projector remote, press Source Search
 - Select Auto
 - Wait a few seconds for the image to appear
-

No sound

- Check the **Denon display is lit** (amplifier is on).
 - Increase volume using the **Denon remote**.
 - Check your laptop volume is not muted.
 - Ensure HDMI is selected as the audio output on the laptop.
-

Screen does not move

- Check the screen power is on.
 - Press the arrow button **once only**.
 - Do not force the screen by hand.
-

IMPORTANT NOTES

- Please **do not change any system settings**.
- If something doesn't work, stop and contact the hall committee.
- The system is pre-configured for ease of use.

Any issues – contact Scott Alford